



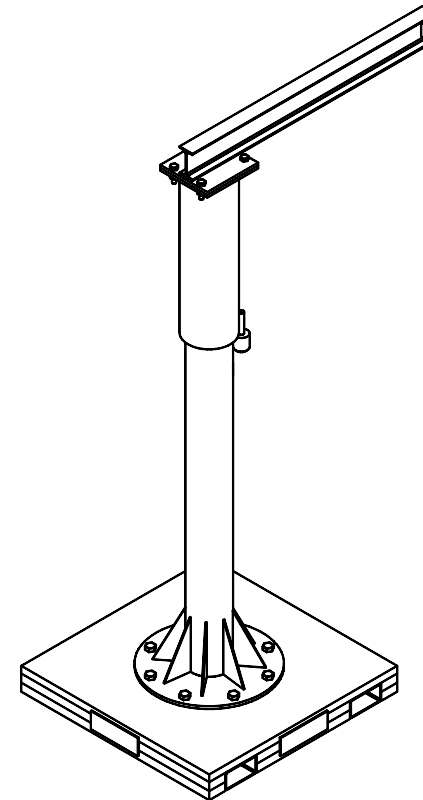

1377 Kimberly Drive  
Neenah, WI 54956-1642  
Office (920) 722-0101  
Fax (920) 725-1394  
[www.contrx.com](http://www.contrx.com)

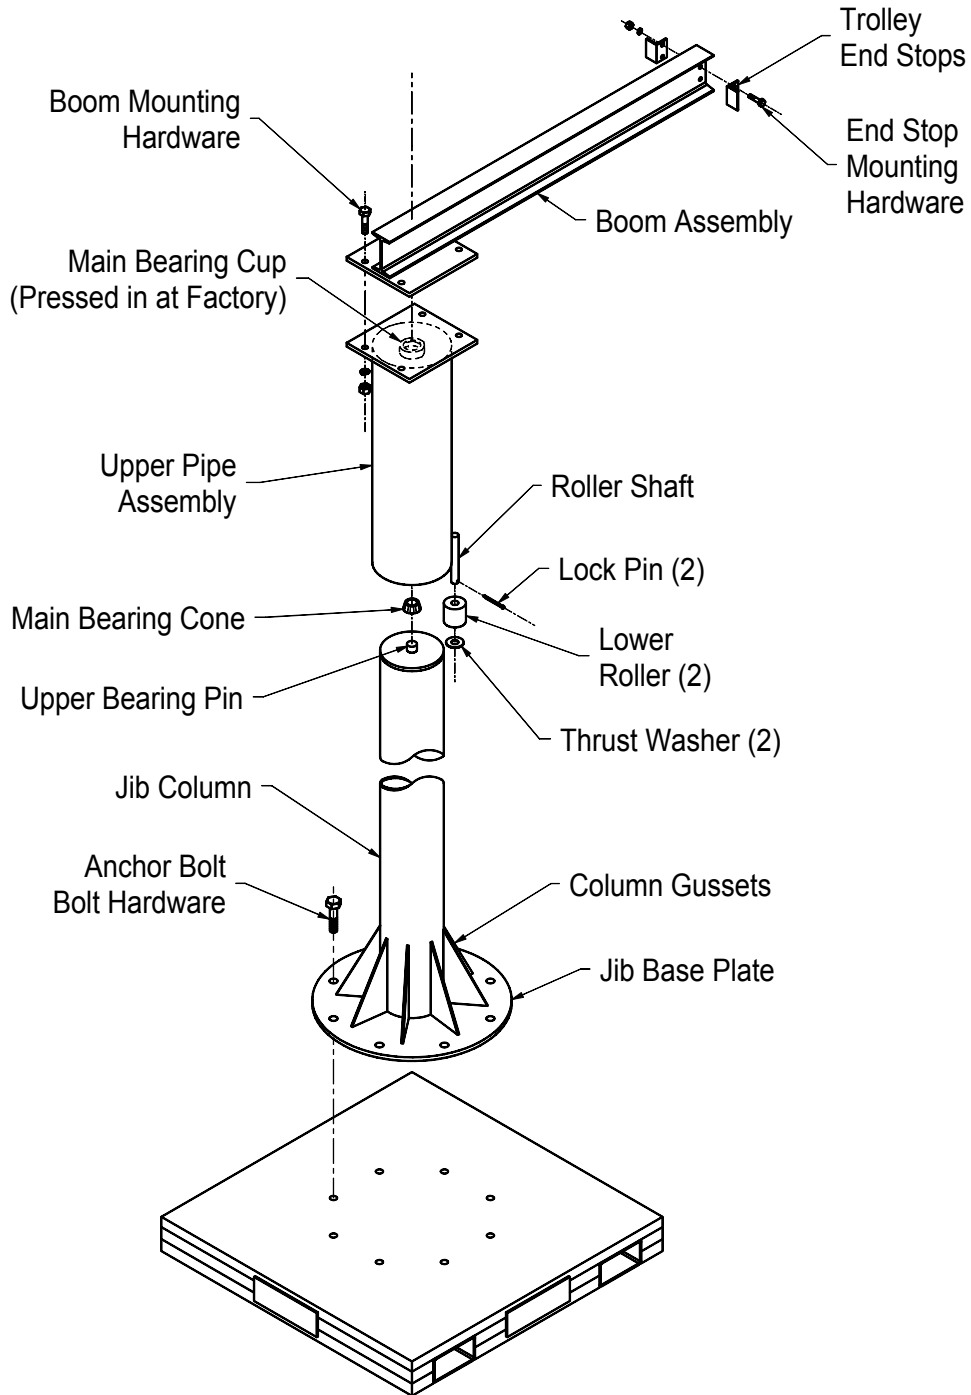

Assembly Note:  
Center the lower rollers directly below the boom.

Portable Jib Assembly Detail	
8-16-02 Not to scale	DWG NO PBB-1005-A